



# Pedestal Fan

## Operating Instructions & Trouble Shooting Guideline

*\*This unit is designed to be used on a single dedicated 20amp circuit.*

615.822.4392

Model# 18203

### Operating Instructions

#### HOW TO ADJUST TILT

1. Loosen the ADJUST KNOB.
2. Adjust fan head to the desired tilt.
3. Tighten the ADJUST KNOB.

#### SPEED CONTROL

ROTATE SWITCH markings 0, 1, 2, 3 designate OFF, LOW, MEDIUM, and HIGH, respectively. It is normal for the fan to feel warm to the touch after continuous operation. This fan features a thermostat that will automatically shut off fan should it overheat for any reason. If this happens, immediately unplug the fan from the outlet.

#### TO MAKE FAN OSCILLATE

Pull up on the OSCILLATING PULLER at the top of the fan head.

### Operating Tips

1. Never insert fingers or other objects through the grille guard when fan is in operation.
2. Disconnect the fan when moving from one location to another.
3. DO NOT use fan in windows. Rain and moisture may create electrical hazard.
4. Surges in electrical power or excessive heat may cause the fan to turn off. Wait approximately 15 minutes for the fan to resume operation.