



IT'S ALL IN THE DETAILS.

615.822.4392

# Outdoor Fireplace

## Operating Instructions & Trouble Shooting Guideline

Model No. GAD1429SP

### Operating Instructions

#### BURNER CONNECTIONS

1. Make sure the regulator hose and valve connections are securely fastened to the burner and the tank.
2. Visually check the connection between the burner/venturi tube and orifice.
3. Make sure the burner/venturi tube fits over the orifice.

**WARNING:** Failure to inspect this connection or follow these instructions could cause a fire or an explosion which can cause death, serious bodily injury or damage to property.

4. If the burner/venturi tube does not rest flush to the orifice, please contact Liberty Party Rental 615.822.4392 for assistance.

#### LIGHTING

**WARNING:** NEVER light the burner with the cover on the outdoor fireplace.

**CAUTION:** Keep outdoor gas appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

**CAUTION:** Do NOT obstruct the flow of combustion and ventilation air.

**CAUTION:** A clogged tube can lead to a fire.

1. Check for obstructions of airflow to the burner. A clogged burner tube can lead to a fire.
2. Control knob must be in the "OFF" position.
3. Clear small area of glass rocks away from the igniter cover.
4. Connect LP gas tank.
5. Turn LP gas tank valve to "OPEN."
6. Push and turn control knob to (HIGH). The burner should light. If it does not, repeat up to three times.
7. After 20 seconds, release and turn control knob counterclockwise to adjust flame to desired height.
8. If ignition does not occur in 5 seconds, turn burner control knob to "OFF," wait 5 minutes, fan with a newspaper or magazine, and repeat lighting procedure.

#### TURNING OFF

1. Turn LP gas tank valve to "CLOSED."
2. Turn control knob to the "OFF" position. Note: A "poof" sound is normal as the last of the LP gas is burned.

## Troubleshooting Guidelines

### IF IGNIGHTER DOES NOT LIGHT BURNER

1. Wearing heat-resistant gloves, position a long lit match or long lit butane lighter near the pilot housing.
2. Push and turn control knob to (LOW).
3. Remove match/lighter once burner is lit. CAUTION: After lighting - using a fireplace tool and heat-resistant gloves, carefully move the glass rocks back to their proper position, being careful to avoid the flame.
4. After lighting, observe the burner flame. Make sure all burner ports are lit. CAUTION: If ignition does not occur in 5 seconds, turn control knob to "OFF," wait 5 minutes, fan with a newspaper or magazine, and repeat lighting procedure.